Memo-Matic*

BOOK 32

KNITTING FASHIONS BY SINGER

Memo-Matic*
KNITTING FASHIONS
BY SINGER

Published with All Rights Reserved by
SINGER AUSTRALIA LIMITED

tension

This varies slightly with each Singer Machine, so it is necessary to check your tension before commencing.

How to check your tension

It is advisable to make a swatch or sample piece in the yarn to be used and measure 24 hours later. Set up single bed machine with 70 stitches, and with the T.D. at the setting recommended for the yarn, work 70 rows. Remove work from machine and, using a rule or inch tape, measure the stitches to 4 inches (10 cm) and the rows to 4 inches (10 cm). If the tension is too loose, move the T.D. setting forward one dot. (Remember when working ribbing to alter both T.D's either back or forward to correspond with stockinet.)

CAUTION

These garments have been designed exclusively for the yarns specified. We strongly recommend the use of this yarn to obtain the correct results.

abbreviations

Beg.	Beginning
Dec.	Decrease
Incr.	Increase
K.	Knit
Rem.	Remaining
R.C.	Row Counter
St.	Stitch
St.St.	Stocking Stitch
T.	Tension
M.C.	Main Colour
C.C.	Contrast Colour
F.1	Feeder 1
F.2	Feeder 2

PATTERN No. 1

PATTERN No. 2

1 Lady's shawl

INSTRUCTION SUITABLE FOR MODELS 312, 313, 321, 322, 323

MEASUREMENTS

Size	cm	50 x 200
	ins.	19¾ x 78¾

MATERIALS

PATONS AZALEA 'PATONISED'

25g balls 17

3.00 (No. 10-11) "Disc" Crochet Hook.

PATTERN

Punch card as shown for Pattern No. 12, Memomatic Pattern Book, Page 86. (Lake Making). See also Instruction Manual. Lace Knitting.

TENSION—40 sts. and 64 rows to 10 cm (approx. 4 ins.) over pattern counting needles in "A" position. Suggested T. 5.1. Check the tension on your machine to ensure accuracy.

SHAWL—N.B. Carriage on right bring 189 needles into "D" position, 91 to left of 0, 98 to right of 0. Push needles back to "A" as per needle arrangement beneath chart. Hand wind yarn from left to right as in instruction book. R.C.0. T.5.1, K.1 row. Using card set machine for "order 1" and K.1 row. Commence pattern and K.1200 rows. 1202 rows. Cast off.

MAKE UP—Wind yarn around a piece of cardboard 20 cm (7¾ ins.) wide and cut along one edge. With wrong side facing using crochet hook and 6 strands of yarn, fold yarn in half and draw a loop through loopy section at one corner of shawl, draw ends through this loop and pull tightly to form knot. Repeat in each loopy section along end of shawl. Working over cardboard 4 cm (1½ ins.) wide, knot fringe once more as illustrated. Repeat at other end of shawl. Using hook work 2 rows double crochet evenly along both sides of shawl. With a slightly damp cloth and warm iron, press *sides only* very lightly.

2 Lady's scarf

INSTRUCTION SUITABLE FOR MODELS 321, 322, 323. OTHER MODELS SELECT ANOTHER WEAVING DESIGN.

MEASUREMENTS

Size	150 cm x 20 cm (at ends)
	59 ins. x 7¾ ins.

MATERIALS

PATONS BLUEBELL

Main Colour — 25g balls 12

PATONS MYSTIQUE

Contrast — 50g balls 3

3.50 (No. 9) "Disc" Crochet Hook.

PATTERN

Models 313, 312 — Select own weaving design. Models 321, 322 and 323. Series 51 — Card 226A. Weaving (4). Page 13.

TENSION—25 sts. and 39 rows to 10 cm (approx. 4 ins.) over pattern. Suggested T. 8. Check the tension on your machine to ensure accuracy.

SCARF—Carriage on right, bring 100 needles into "D" position, handwind M.C. from left to right as given in instruction manual. T. 8. R.C. 0, K. 1 row. Set machine for "order 1" and K. 1 row. Using card and both yarns commence pattern and K. 584 rows. Cast off. 586 rows.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Fold scarf in half lengthwise and using crochet hook and M.C. commencing at end near folded edge work 1 row double crochet evenly across end and along edge for 35 cm (13¾ ins.) working through both thicknesses, work along one edge only for 80 cm (31½ ins.), then work to end working through both thicknesses. Work across rem. single edge.

FRINGE—Wind C.C. around piece of cardboard 15 cm (5-7/8 ins.) wide and cut along one side. Using 6 strands of C.C. and crochet hook, fold yarn in half and draw loop through double crochet at corner of scarf, pull ends through loop and tighten. Repeat at 1.27 cm (½ in.) intervals on each end of scarf.

3 child's scarf & mittens

INSTRUCTION SUITABLE FOR MODELS 322/323 ONLY.

MEASUREMENTS

Scarf	130 cm x 20 cm 51¼ ins. x 7¾ ins.
Mittens	To fit 12.5 cm (5 ins.) hand. (wrist to fingertip)

MATERIALS

PATONS BLUEBELL 'PATONISED'

Scarf

Main Colour –	25g balls	7 balls
Contrast –	25g balls	2 balls

Mittens

Main Colour –	25g balls	2 balls
Contrast –	25g balls	1 ball

3.50 (No. 9) "Disc" Crochet Hook

PATTERN

Models 322 and 323 – Punch card as shown for Pattern 24, Memo-Matic Pattern Book page 39 Single Motif or Card 312 – Series 60. See also page 52 Instruction Book.

TENSION–28 sts. and 38 rows to 10 cm (approx. 4 ins.) over st. st. Suggested T. 8. Check the tension on your machine to ensure accuracy.

SCARF–(Make 2 pieces). Carriage on right, using waste knitting cast on 57 sts. odd st. on right. K. 6 rows. K. 1 row with ravel cord. R.C. 0. T. 8 using M.C., K. 42 rows. Transfer every 2nd st. on to adjacent needle leaving empty needles in working position, then K. 6 rows. * Using card set machine for "order 1" and K. 1 row. See P. 52 of instruction manual.

Note–Work pattern over centre 24 sts. only. Using both yarns commence pattern and K. 35 rows. Stop card. * Take up hem. T. 10 using M.C., K. 1 row. T. 8, K. 208 rows stockinet. 293 rows. Knit 6 rows waste knitting and remove from machine.

MAKE UP–With a slightly damp cloth and warm iron, press lightly. Graft 2 sections of scarf tog. Wind C.C. around piece of cardboard 15 cm (5-7/8 ins.) wide and cut along one side. With wrong side of scarf facing, using 8 strands of C.C. and crochet hook, fold yarn in half and draw loop through an eyelet at corner of scarf, pull ends through loop and tighten. Repeat in alt. eyelets to end. Repeat this procedure at other end of scarf. Using crochet hook work 3 rows double crochet evenly along both sides of scarf working through both thicknesses at each end.

MITTENS – FRONT SECTION–(Make 2). Using C.C., cast on 29 sts. for K. 1, P. 1 rib, odd st. on right. R.C. 0. T. 5, K. 19 rows. Transfer to main bed. T. 8 using M.C. K. 7 rows. Working as from * to * for Scarf work 31 rows. Dec. at each end of next and every 3rd row until 25 sts. remain. K. 1 row. Using M.C. and stockinet work 8 rows dec. at each end of every 3rd row from previous dec. until 19 sts. remain. Cast off. 70 rows.

BACK SECTION–(Make 2). Work as for Front Section, omitting motif.

THUMB–(Make 2). Carriage on right, bring 3 needles forward into "D" position. Using M.C. handwind yarn from left to right as in instruction book. R.C. 0, T. 8, K. 2 rows. Incr. 1 st. at each end of next row and every 3rd row 6 times. 17 sts. K. 14 rows. 35 rows. Break off yarn. Run end through remaining sts. and remove from machine, draw up and fasten off securely.

MAKE UP–With a slightly damp cloth and warm iron, press lightly. Using back-stitch, sew up thumb seam and sew back and front sections of mittens tog. leaving opening for thumb. Sew thumb in position placing thumb seam to inside edge. Press seams.

4 Lady/man socks

INSTRUCTION SUITABLE FOR MODELS 312, 313, 321, 322, 323

MEASUREMENTS

		Lady		Man	
Size		**A**	**B**	**C**	**D**
To fit foot	cm	22	24	27	29
	ins.	8½	9½	10½	11½

MATERIALS

PATONS PATONYLE 'PATONISED'

Main Colour –	25g balls	4	4	4	4
Contrast –	25g balls	3	3	3	3

PATTERN

Models 312, 313 – Use Fair Isle Card of own choice.
Models 321, 322 and 323 – Series 51 – Card No. 224A. Fair Isle (2). Page 6 – Houndstooth check. Series 55 – Card No. 267A. Fair Isle (6). Page 4 – Large diamond argyle.
Series 56 – Card No. 280A. Fair Isle (10). Page 4 – Continuous small diamonds
or use card of own choice.

TENSION–31 sts. and 40 rows to 10 cm (approx. 4 ins.) over pattern. Suggested T. 6.1. Check the tension on your machine to ensure accuracy.

LEFT SOCK–Using M.C., cast on for K. 1, P. 1, rib 73 (79, 83, 89) sts. R.C. 0. T. 2, K. 22 rows dec. 1 st. in last row. 72 (78, 82, 88) sts. Transfer to main bed. Using Card T. 6.1 set machine for "order 1" row 1 and K. 1 row. Using both yarns, commence pattern and K. 8 rows. Dec. at each end of next and every following 12th (12th, 14th, 16th) row 6 (6, 5, 5) times. 58 (64, 70, 76) sts. K. 25 (33, 47, 45) rows. Stop card. 129 (137, 149, 157) rows. T. 6 using M.C. and stockinet **shape heel** – * Russel levers on 1 or Blue for partial knitting. On side opposite carriage bring 30 (33, 36, 39) needles to "D" leaving 28 (31, 34, 37) in "B" position. K. 1 row, placing yarn under inside "D" needle. ** On side opposite carriage bring last needle to "D". Knit 1 row. Hook yarn under needle brought to "D". ** Rep. from ** to ** 12 (14, 16, 18) more times. 7 (8, 9, 10) needles in "D" on right and 15 (16, 17, 18) needles in "B" position. Bring needles to working position by pushing one inside needle to "C" on side opposite carriage each row 15 (16, 18, 20) times. 29 (32, 35, 38) in "B" position. Release card. T. 6.1. Russel levers on 2 or Red K. 1 row working across all needles with both colours and putting needles in "D" position back to "B" before working row. *** K. 57 (63, 71, 77) rows. Stop card. T. 5.2. Using M.C. and stockinet, **shape toe** – Rep. from * to *** working last row in stockinet with russel levers on 2 or Red. 244 (266, 294, 316) rows. K. 6 rows waste knitting and remove from machine.

RIGHT SOCK–Work as for Left Sock but knit 1 extra row before shaping heel.

MAKE UP–With a slightly damp cloth and warm iron, press lightly. Graft toes. Using back-stitch, sew up seams. Press seams.

5 Lady/girl pull-on hat

INSTRUCTION SUITABLE FOR MODELS 312, 313, 321, 322, 323

MEASUREMENTS

Size		**A**	**B**	**C**
Around head	cm	54	55	56
	ins.	21¼	21¾	22

MATERIALS

PATONS BLUEBELL 'PATONISED'

Main Colour –	25g balls	1	2	2
C.C. 1 –	25g balls	1	2	2
C.C. 2 –	25g balls	2	3	4

PATTERN

Models 312, 313 – Series 21 – Card No. 21A. Fair Isle.
Models 321, 322 and 323 – Series 51 – Card No. 221A – Fair Isle (1) Page 6.

TENSION–29 sts. and 38 rows to 10 cm (approx. 4 ins.) over pattern. Suggested T. 8. Check the tension on your machine to ensure accuracy.

CAP–Section 1. (Make 3 pieces). Carriage on right bring 28 (29, 30) needles into "D" position, hand-wind M.C. from left to right as given in instruction manual. R. 8. R.C. 0., K. 1 row. Using card set machine for "order 1" and K. 1 row. Using both yarns. (C.C.1 in "F.1" and M.C. in "F.2"), com-

mence pattern and K. 30 (36, 42) rows. Dec. 1 st. at each end of next row and every 2nd row 4 times, then in every row 8 (8, 9) times. 2 (3, 2) sts. 49 55, 62) rows. Cast off.

Section 2—(Make 3 pieces). Work as for Section 1 reversing colours.

BAND—Using C.C.2, cast on for K. 1, P. 1 rib 153 (157, 161) sts. T. 5, K. 60 (76, 92) rows. Cast off loosely.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Using back-stitch, join sections of hat together placing section 1 and section 2 alternately. Sew band in position placing join to one seam. To make a pom-pom. Using cardboard 6.5 cm (2½ ins.) in diameter with a hole 1 cm (½ in.) wide wind C.C. 2 round and round the cardboard until the centre hole is completely filled up. Place the point of a pair of scissors between the two pieces of cardboard and cut around, keeping scissors between two circles of cardboard all the time. Using a double strand of yarn, wrap round between the two circles of cardboard, knot firmly and take away cardboard. Trim pom-pom and sew to top of pull on hat.

6 Lady/girl long socks

INSTRUCTION SUITABLE FOR MODELS 312, 313, 321, 322, 323

MEASUREMENTS

		GIRL – LADY		
Size		**A**	**B**	**C**
To fit foot	cm	12.5	18	23
	ins.	5	7	9

MATERIALS

PATONS AZALEA 'PATONISED'			
25g balls	2	3	4

PATTERN

Models 312, 313 – Card No. 2A. Lace Knitting (12) Page 60.
Model 321 – Card No. 2A. Lace Knitting (2) Page 51.
Models 323, 322 – Card No. 2A. Lace Knitting (Appli) (2) – Page 64. (Wrong side of pattern is right side of work).

TENSION—29 sts. and 68 rows to 10 cm (approx. 4 ins.) over pattern counting needles in "A" position. Suggested T. 5.1. Check the tension on your machine to ensure accuracy.

LEFT SOCK—Carriage on right bring 65 (77, 89) needles into "B" position, odd st. on left, then push every 2nd needle back into "A" position, K. 6 rows waste knitting, then K. 1 row with ravel cord, R.C.0, T. 2, K. 38 (44, 52) rows. Take up hem, placing loops onto needles with sts. T. 5.1 using card set machine for "order 1" and K. 1 row. Commence pattern and K. 12 rows. Count needles in "A" throughout. Dec. 1 st. at each end of next row and every following 10th (12th, 14th) rows 11 times. 41 (53, 65) sts. K. 41 (45, 57) rows. R.C. 203 (235, 277).

Note—For Partial Knitting see Instruction Manual. * Russel levers on 1 or blue for partial knitting. On side opposite carriage bring 21 (27, 33) needles to "D". On rem. needles, bring non-working needles into "B" position, picking up loops from adjacent needles. 20 (26, 32) needles in "B" position. K. 1 row, placing yarn under inside "D" needle.** On side opposite carriage bring last needle to "D". Knit 1 row. Hook yarn under needle brought to "D". ** Rep. from ** to ** 8 (12, 14) more times. There are now 5 (7. 8) needles in "D" on right and 11 (13, 17) needles in "B". Bring needles to working position by pushing one inside needle to "C" on side opposite carriage each row 10 (14, 16) times. 21 (27, 33) needles in "B" position. Transfer every 2nd st. on to adjacent needle, pushing empty needles back into "A" position. Using transfer tool, push "D" position needles into "B" position, K. 1 row working across all needles ***. K. 55 (79, 109) rows in pattern. Using stockinet, shape toe – Rep. from * to *** working last row in stockinet. 300 (372, 452) rows. K. 6 rows waste knitting and remove from machine.

RIGHT SOCK—Work as for Left Sock, but K. 1 extra row before shaping heel.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Graft toes. Using back-stitch, sew up seams. Press seams.

PATTERN No. 3

PATTERN No. 4

PATTERN No. 5

PATTERN No. 6

PATTERN No. 7

PATTERN No. 8

PATTERN No. 9

7 child's Long socks

THIS INSTRUCTION IS SUITABLE FOR MACHINES WITH SRP 322 RIBBER ONLY

MEASUREMENTS

Size		A	B
To fit foot	cm	18	21
	ins.	7	8

MATERIALS

PATONS BLUEBELL 'PATONISED'

Main Colour –	25g balls	3	4
C.C. 1 –	25g balls	1	1
C.C. 2 –	25g balls	1	1

1 reel Singer soft nylon thread.

PATTERN

Card 1 R – A Punch Pile Knitting (1) Page 35 (for top of socks). Series 53 – Card 247A. Fair Isle (8) – Page 9.

TENSION–31 sts. and 50 rows to 10 cm (approx. 4 ins.) over pile pattern at top of socks. Suggested T. 8 on main machine and T. 6 on ribber. 29 sts. and 40 rows to 10 cm (approx. 4 ins.) over Fair Isle pattern. Suggested T. 8. Check the tension on your machine to ensure accuracy.

Pattern Stitch–* With M.C. in F. 1 and C.C.1 in F. 2 K. 18 rows. M.C. in F. 1 and C.C. 2 in F. 2, K. 9 rows. M.C. in F. 1 and C.C. 1 in F. 2, K. 18 rows *. ** M.C. in F.1 and C.C. 2 in F. 2, K. 18 rows. M.C. in F. 1 and C.C. 1 in F. 2, K. 9 rows. M.C. in F. 1 and C.C. 2 in F. 2, K. 18 rows. **

SOCKS–(Left Foot). Cast on for Double rib 61 (67) sts. R.C. 0. T. 7, K. 1 row. Transfer main bed sts. to ribber bed. Bring same number of needles forward into "B" position on main bed. Refer to step 7 RIBBER INSTRUCTION MANUAL P. 35, and push 1 needle on the main machine down to "A" position at both ends. Using card K. 1 row. Using auxiliary yarn and recommended tension K. 30 rows. K. 5 rows waste knitting and remove from machine noting not to count these rows on R.C. Reverse work and replace on main bed. Carriage on right. Using M.C., T. 8, K. 19 rows dec. 1 st. at each end of 9th and 17th rows. Using Card 247A set machine for "order 1" and K. 1 row. Commence pattern stitch and knit from * to * at same time dec. 1 st. at each end of every following 8th row from previous dec. 4 times. 49 (55) sts. Using M. and stockinet K.0 (6) rows. 98 (104 rows.)

Shape heel–* Russel levers on 1 for Partial Knitting. Bring 25 (28) needles opposite carriage in to "D" position leaving 24 (27) in "B" position. K. 1 row placing yarn under inside "D" needle. ** On side opposite carriage bring last needle to "D". K. 1 row. Hook yarn under needle brought to "D". ** Rep. from ** to ** 8 (10) more times. There are now 5 (6) needles in "D" on right and 15 (17) in "B". Bring needles to working position by pushing one inside needle to "C" on side opp. carriage each row 10 (12) times – 25 (28) needles in "B". Stop knob off. Russel levers on 2, K. 1 row working across all sts. *** Continue ** to ** of pattern st. and K. 45 rows. Stop card. Using M. for remainder K. 0 (6) rows.

Shape Toe–Work as from * to *** for heel. 182 (198) rows. K. 6 rows waste knitting and remove from machine.

MAKE UP–With a slightly damp cloth and warm iron, press fair isle *only* very lightly. Graft toe tog. Using back-stitch, sew up side seam. Fold punch pile band to right side.

8 Lady's pull-on hat

THIS INSTRUCTION IS SUITABLE FOR MACHINES WITH SRP 322 RIBBER ONLY

MEASUREMENTS

HEAD	cm	56
	ins.	22

MATERIALS

PATONS AZALEA 'PATONISED'

25g balls 4

Singer soft nylon thread, 1.

PATTERN

Series 71 – Punch Pile Patterns – Card No. 329 (9). See also Ribber Instruction Manual page 35.

TENSION–26 sts. and 36 rows to 10 cm (approx. 4 ins.) over st. st. (knitted double). Suggested T. 9. 35 sts. and 60 rows to 10 cm (approx. 4 ins.) over pattern. Suggested T. 5.1 on main bed and 3.1 on ribber bed for Azalea. Check the tension on your machine to ensure accuracy.

HAT

CROWN–(Make 2 pieces using double yarn). Carriage on right, bring 46 needles into "D" position, then handwind Azalea from left to right as in instruction book. R.C. 0. T. 9, K. 2 rows.

Note–See P. 67 (Model 321), P. 17 (Models 322 and 323) for notes on Partial Knitting. **(Push 3 needles opposite carriage into "D" position and K. 2 rows) 7 times. K. 2 rows across all sts. ** Rep. from ** to ** 6 times. 114 rows. Cast off.

BAND–(Use *single* yarn). Cast on for Double rib 189 sts. each bed. SEE RIBBER INSTRUCTION MANUAL P.20 T. 2, K. 1 row. Transfer main bed sts. to ribber bed. Push 189 needles to "B" on main bed. Push 1 needle on the main machine down to "A" position at both ends. Refer to Step 7. R.C. 0. Insert card and K. 1 row. Using auxiliary yarn and recommended tension K. 116 rows. 117 rows. Cast off.

MAKE UP–With a slightly damp cloth and warm iron, press main part of hat lightly. Using back-sittch, sew 2 main pieces of hat tog. Using back-stitch, join hat band. Sew cast-off edge of hat band to crown. Fold band in half and slip stitch other side in position. Fold band back. Run a gathering thread around middle of hat, draw up and fasten off securely.

9 Family balaclava

INSTRUCTION SUITABLE FOR MODELS 312, 313, 321, 322, 323

MEASUREMENTS

Size		CHILD		LADY	MAN
To fit head	cm	51	54	56	58
	ins.	20	21	22	23

MATERIALS

PATONS BLUEBELL 'PATONISED'

Main Colour –	25g balls	2	2	3	3
Contrast –	25g balls	2	2	2	2

Length of round elastic (if desired).
3.50 (No. 9) "Disc" Crochet Hook.
4 (5, 5, 6) Buttons.

PATTERN

Models 312, 313 – Series 30 – Card No. 118A. Fair Isle.
Models 321, 322 and 323 – Series 58 – Card 296A. Fair Isle (6).

TENSION–28 sts. and 38 rows to 10 cm (approx. 4 ins.) over st. st. Suggested T. 8. Check the tension on your machine to ensure accuracy.

MAIN PART–Using M.C., cast on for K. 1, P. 1 rib 141 (153, 159, 167) sts. R.C. 0. T. 5, K. 9 (11, 13, 15) rows. Transfer to main bed. Using C.C. T.8, K. 5 rows. Using card set machine for "order 1" and K. 1 row. Using both yarns T. 9 commence pattern and K. 19 rows. Stop card. T. 8. Working in stripes of 6 rows C.C. and 6 rows M.C. throughout, work 9

(11, 21, 23) rows. Cast off 5 (6, 5, 5) sts. at beg. of next 4 rows.

Shape back—K. 73 (78, 85, 90) needles opposite carriage on to 6 rows waste knitting push same needles into "A" position (waste knitting prevents brushing up of yarn). Cast off 5 sts. at beg. of next row and 2nd rows 5 (8, 9, 8) times, A and D only – then 6 (4) sts. at beg. of foll 2nd rows 2 times. Work 1 row. Cast off. Pull undone waste knitting and return needles into "B" position. Cast off 25 (27, 31, 33) sts. at centre. R.C. 45 (49, 61, 65). Knit to correspond with other side.

LOWER BAND—Using M.C., cast on for K. 1, P. 1 rib 79 (91, 107, 113) sts. T. 7, K. 22 (24, 26, 28) rows. Cast off loosely.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Sew up back seam. Fold 16 (18, 20, 22) rows at back of balaclava to centre of 25 (27, 31, 33) cast off sts. in middle and using back stitch sew in position. Thread 3 rows of round elastic through back of front band (if desired). Sew lower band in position, omitting head band. Using hook and M.C. work 2 rows double crochet evenly along front edge of lower band and ends of front band, working 4 (5, 5, 6) buttonloops along right side for lady/girl and left side for man/boy. Sew on buttons. Press seams.

---

10 BAG

INSTRUCTION SUITABLE FOR MODELS 312, 313, 321, 322, 323

MEASUREMENTS

Size	45 cm x 30 cm x 10 cm 17½ ins. x 11¾ ins. x 4 ins.

MATERIALS

PATONS BLUEBELL 'PATONISED'

Main Colour –	25g balls	10

PATONS DUET (DUO) 'PATONISED'

C.C. 1 –	50g balls	3
C.C. 2 –	50g balls	2

Lining to match Main Colour.

Non woven stiffening.

Braid for Trimming.

PATTERN

Models 312, 313 – Series 29 – Card 101A. Weaving. Models 321, 322 and 323 – Series 53 – Card 244A. Weaving (2). Page 10.

TENSION—24 sts. and 38 rows to 10 cm (approx. 4 ins.) over pattern. Suggested T. 8. Check the tension on your machine to ensure accuracy.

PATTERN STITCH—*Using M.C. and C.C. 1 stop knob on o, K. 1 row. Stop knob off. K. 7 rows. Using M.C. and C.C. 2 K. 4 rows. *

BAG—(Make 2 pieces). Carriage on right, bring 73 needles into "D" position, handwind M.C. from left to right as given in instruction manual. T. 8. R.C. 0., K. 1 row. Using card, set machine for "order 1" row 1 and K. 1 row. Using both yarns, work Pattern stitch from * to * until R.C. reads 178. Cast off.

POCKETS—(Make 2). Carriage on right, bring 37 needles into "D" position, handwind M.C. from left to right as given in instruction manual. T. 8. R.C. 0, K. 1 row. Using card set machine for order 1, row 1 and knit 1 row. Using both yarns work Pattern Stitch from * to * until R.C. reads 82. Cast off.

GUSSET AND HANDLES—Carriage on right, bring 23 needles into "D" position, handwind M.C. from left to right as given in instruction manual. T. 8. R.C. 0., K. 1 row. Using card set machine for "order 1", row 1 and Knit 1 row. Using both yarns work Pattern Stitch from * to * until R.C. reads 650. Cast off.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Cut out lining and stiffening (if desired) to shape of bag and gusset. Using back-stitch sew front and back of bag to gusset leaving remainder free for handle and making seam in gusset in middle of bottom of bag. Join lining and stiffening in same manner. Sew lining and stiffening into bag. Sew on pockets and braid as illustrated.

PATTERN No. 10

PATTERN No. 11

PATTERN No. 12

11 man's ties

INSTRUCTION SUITABLE FOR MODELS 312, 313, 321, 322, 323

MATERIALS (For each Tie)

PATONS PATONYLE 'PATONISED'

Main Colour – 25g balls 2

Contrast – 25g balls 2

Lining

PATTERN

Models 321, 322, 323 – Series 53 – Card No. 250 A. Fair Isle (7) Page 9 – lightning streaks.
Series 56 – Card No. 274 A. Fair Isle (4) Page 2 – small diamonds.
Series 52 – Card No. 240 A. Fair Isle (8) Page 10 – Fleurs de Lis.
Models 312, 313 – Select own small Fair Isle card.

TENSION–31 sts. and 40 rows to 10 cm (approx. 4 ins.) over pattern. Suggested T. 6.1. Check the tension on your machine to ensure accuracy.

TIE–Carriage on right, bring FIRST 51 needles on LEFT SIDE OF MACHINE out to "D" position, then handwind M.C. from left to right as shown in instruction manual. T. 6.1, K. 1 row. Using card set carriage for order 1 and K. 1 row. R.C. 0. Using both yarns commence pattern and work 10 rows incr. on right side of machine in 1st, 3rd, 4th, 6th, 8th and 9th rows. Rep. last 10 rows 5 times. Work 3 rows incr. at beg. of 1st and 3rd rows. 89 sts. 63 rows. Continue incr. at right side of machine (as before) at same time cast off 2 sts. at beg. (left side) of next row, then dec. at same side of machine in next 5 rows. 69 rows. 86 sts. Continue incr. at right side of machine (as before) at same time dec. (as in last 6 rows) at left side of machine until R.C. reads 140. 45 sts.
141st row – Incr. 1 st. on right and dec. 1 st. on left.
142nd row – Cast off 2 sts., knit to end.
143rd row – As 141st row.
144th row – as 141st row.
145th row – Dec. 1 st. on left.
146th row – as 141st row.
Rep. rows 141 to 146 incl. once, then rows 144 to 146 incl. 5 times. 34 sts. 167 rows. Rep. 141st row 4 times. Next row – knit. Rep. last 5 rows 6 times. 34 sts. 202 rows. Knit off manually on to 6 rows waste knitting and remove from machine. On left side of machine leave first 3 needles in "A" position, select next 34 needles and replace work removing waste yarn. Continue to repeat last 5 rows until R.C. reads 257. 34 sts. Incr. at right side of machine in every row 25 times, at same time dec. 1 st. at left side in (next 4 rows out of 5) 5 times. 282 rows. 39 sts. Incr. at right side of machine in every row 36 times, at same time dec. 1 st. at left side in (next 2 rows out of 3) 12 times. 318 rows. 51 sts. Continue dec. at left side in 2 rows out of 3 (as before) 11 times. 29 sts. Dec. 1 st. at beg. of next row. 28 sts. Next row Knit. 353 rows. Cast off.

MAKE UP–With a slightly damp cloth and warm iron, press lightly. Cut lining to shape of tie allowing 1.27 cm (½ in.) for turnings. Stitch lining to tie. Join shaped edges of tie to form centre back seam. Press lightly.

12 Family slippers

INSTRUCTION SUITABLE FOR MODELS 312, 313, 321, 322, 323

MEASUREMENTS

Size		A	B	C	D
To fit foot	cm	14	19	24	28
	ins.	5½	7½	9½	11

MATERIALS

PATONS BLUEBELL

Main Colour –	25g balls	2	2	3	4

PATONS DUET (DUO)

C.C. 1 –	50g balls	1	1	2	2
C.C. 2 –	50g balls	1	1	1	1

Length of Round Elastic if desired.
3.00 (No. 10-11) "Disc" Crochet Hook.

PATTERN

Models 312, 313 – Series 28 – Card 95A. Weaving.
Models 321, 322 and 323 – Series 52 – Card 236A. Weaving (5) Page 13.

TENSION—23 sts. and 40 rows to 10 cm (approx. 4 ins.) over pattern. Suggested T. 8. Check the tension on your machine to ensure accuracy.

SLIPPERS

SOLE—Carriage on right, bring 7 (11, 13, 15) needles into "D" position. Handwind M.C. from left to right as given in instruction manual. T. 8, R.C. 0, K. 1 row. Using card set machine for "order 1" and K. 1 row. Using both yarns (M.C. and C.C. 1) commence pattern and K. 3 (3, 4, 5) rows incr. 1 st. at each end of every row. 13 (17, 21, 25) sts. K. 27 (39, 50, 57) rows.

Shape heel—Dec. 1 st. at each end of next row and every 2nd row 2 (3, 3, 3) times. 7 (9, 13, 17) sts. K. 17 (23, 29, 37) rows. Dec. 1 st. at each end of every row 1 (1, 2, 2) time/s, 5 (7, 9, 13) sts. K.1 (1, 2, 2) row/s. Cast off. 56 (76, 96, 112) rows.

SIDE OF FOOT—(Shaped edge is top of side piece). Carriage on right, bring 43 (59, 75, 89) needles into "D" position, handwind M.C. from left to right as given in instruction manual. R.C. 0, T. 8, K. 1 row. Using card set machine for "order 1" and K. 1 row. Using both yarns (M.C. and C.C. 1) commence pattern and K. 10 (14, 14, 18) rows. Cast off 23 sts. at beg. of next row. K. 1 row. Cast off 7 (9, 7, 8) sts. at beg. of next row and every 2nd row 1 (1, 3, 3) time/s. K. 1 row. Cast off. 18 (22, 26, 30) rows. Work other side of foot to correspond.

TOP OF SLIPPER—Carriage on right, bring 7 (11, 13, 15) needles into "D" position, handwind M.C. from left to right as given in instruction manual. R.C. 0, T. 8, K. 1 row. Using card set machine for "order 1" and K. 1 row. Using both yarns (M.C. and C.C. 1) commence pattern and incr. 1 st. at each end of every row 3 (3, 4, 5) times. 13 (17, 21, 25) sts. K. 27 (39, 50, 57) rows. Dec. 1 st. at each end of next row and every 2nd row 2 (3, 3, 3) times. 7 (9, 13, 17) sts. Cast off. 37 (51, 63, 71) rows.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Using back-stitch, join sides of slippers, then sew sides to soles making this seam on outside and placing join at centre front and back — noting that wrong side of fabric is right side of work for sole section. Sew top of slipper in position with right side uppermost and seam on outside. Using 9 strands of Duet (Duo) C.C. 2 make a plait to go around tops of slippers and top edge of heel. Using crochet hook and M.C. work 1 row double crochet evenly around opening working over elastic around heel piece only (if desired). Sew plaits in position as illustrated.

Published with All Rights Reserved by

SINGER AUSTRALIA LIMITED

Memo-Matic*
KNITTING FASHIONS BY SINGER

BOOK 32

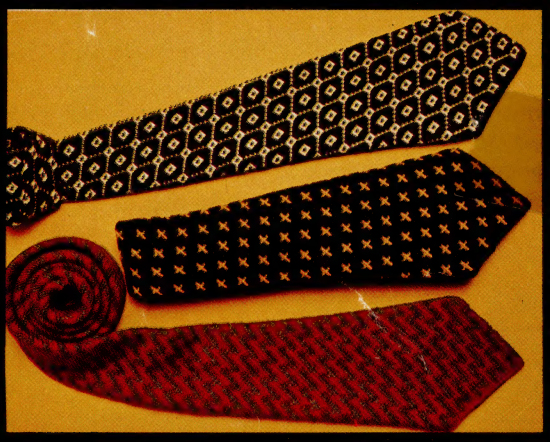

*TRADE MARK OF THE SINGER COMPANY